

Recommendations

Read this manual carefully before using your sauna for the first time.

We recommend you keep it in a safe place for future reference.

- Install the sauna on a perfectly flat surface.
- The sauna must remain in a dry area. Do not use it near a source of water (bath, damp floor, swimming pool).
- Do not use liquid cleaning products. Disconnect the sauna before cleaning and use a wet rag (see Maintenance section).
- Protect the sauna's electrical cable to avoid it being crushed or pinched.
- Prior to replacing certain components, ensure that they are specified by the manufacturer or that they have the same features as the original parts. Incorrect replacement can cause a fire, a short circuit or damage to the sauna. We strongly recommend using a qualified technician.
- To avoid the risk of burns or electric shocks, do not use any metal tools and do not touch the infrared emitters.
- Do not put animals in the sauna.
- Do not dry linen in the sauna (fire hazard).
- Do not leave the sauna switched on without supervision.
- Do not leave the sauna switched on for more than 3 hours at a time to avoid premature deterioration of the equipment. After 3 hours continuous usage, switch off the sauna for at least one hour.
- We recommend that you do not install a locking system on the sauna door.
- Check compliance of your electrical installation prior to connecting your sauna to the power supply.
- Write down and keep the serial numbers of the sauna as well as the purchase invoice.
  They may be requested from you during your after-sales service request.

Safety

IMPORTANT :
Please read the safety instructions carefully before installing and using your sauna cabin.
They are essential for your safety, so please adhere strictly to them.

EN

Beware of hyperthermia, heat stroke or heat exhaustion which can be caused or aggravated by noncompliance with the safety instructions. Symptoms are fever, a rapid pulse, dizziness, fainting, lethargy and numbness in all or part of the body. The effects are: reduced awareness of the heat, ignorance of imminent risks, loss of consciousness.

The sauna must not be used by:

- Children under 6 years of age.
- People with severe reactions to sunlight.
- Elderly or disabled people.
- People with previous medical conditions such as heart disease, high or low blood pressure, blood circulation problems or diabetes without prior medical advice.
- Pregnant women. Excessive temperature can endanger the foetus.
- Persons suffering from dehydration, open sores, eye disorders, burns or sunstroke.

Children between 6 and 16 years of age may use the sauna provided that they are continuously supervised by a responsible adult and that the temperature does not exceed 60°C (140°F).
In the event of problems involving health, medication or injury to muscles or ligaments, do not use the sauna without previously consulting a doctor and obtaining approval.
If surgical implants are worn, do not use the sauna without previously consulting a doctor and obtaining his approval.
Do not use the sauna after strenuous activity.
Wait 30 minutes for your body to cool down.
Do not spend more than 40 minutes in the sauna at any one time.
Do not consume alcohol or drugs before or during the session.
Do not sleep in the sauna when it is in operation.
To avoid the risk of overheating, connect your sauna to a sufficiently powerful electrical outlet and do not connect other electrical equipment to the same wall socket.

To avoid any risk of electrocution or damage to the sauna, do not use it:

- During thunderstorms.
- If the electrical cable is damaged, it must be replaced by a qualified person.
- If the electrical cable overheats, it must be checked by a qualified person.
- If you have to change a bulb, wait until the sauna is switched off and cooled down.

Dry your hands before connecting or disconnecting the electricity.
Never work with wet hands or feet.
Do not switch the electricity or the heating system rapidly on or off as this could damage the electrical system.
Do not try to repair the sauna by yourself without the agreement of the sauna's distributor or manufacturer.
Unauthorized attempts to repair it will invalidate the manufacturer's warranty.


To avoid any risk of short-circuiting:

- No liquid should touch the infrared emitters.
- No hard objects should knock against the emitters and risk breaking them.


Do not use any type of detergent inside the sauna.
Do not pile up or store objects inside or on top of the sauna.
Do not place flammable materials or chemical agents near the sauna.

Description

Parts list

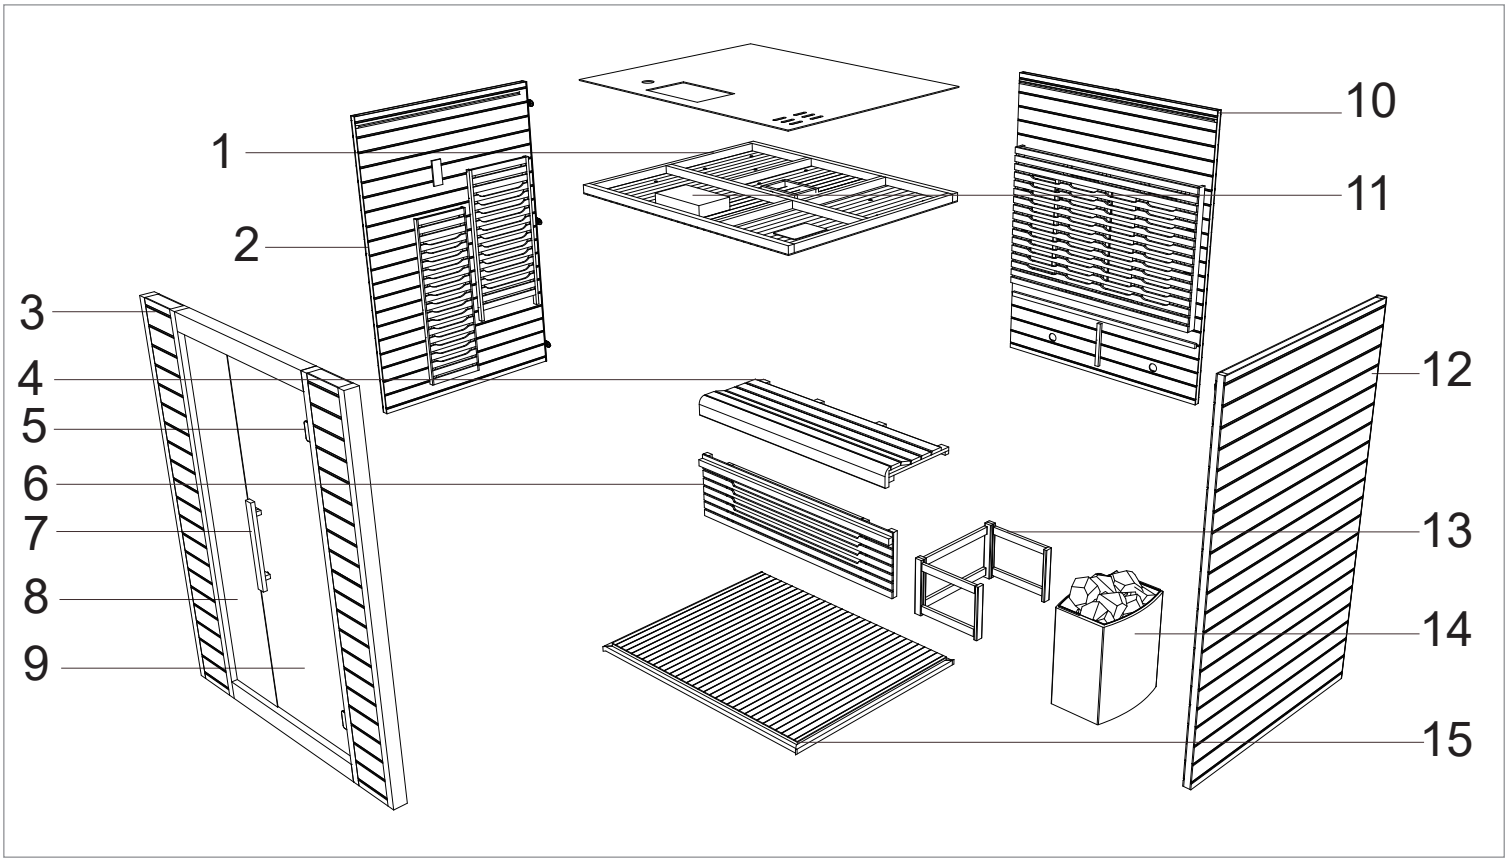

1	Top panel	11	Control box
2	Left panel	12	Right panel
3	Front panel	13	Sauna stove grill
4	Bench	14	Sauna stove
5	Hinge	15	Bottom panel
6	Bench support	16	
7	Handle	17	
8	Windows glass	18	
9	Door glass	19	
10	Back panel	20	



Size	QTY
Ø 4 x 30	8
Ø 5 x 40	6
Ø 3 x 25	4

Installation

EN

Read the assembly instructions carefully before starting.
Choice of location
Holl's saunas are designed solely for interior installation.


Select a space:

- Inside, in a dry area, on a flat stable surface that can support the weight of your sauna.
- The height must be sufficient for you to reach the ceiling and carry out electrical connections and maintenance.
- Away from any source of water, flames or flammable materials.

Practical advice

- Note that sauna assembly requires 2 or 3 adults.
- Clearly identify each panel before you begin.
- During assembly, position your sauna's mains cable so that it is easily accessible.
- Note that there are variations between the models.
-

Tools needed



Phillips Screwdriver




Tape measure



Cutter




Step ladder



Hammer



Spirit level

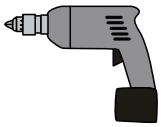



Electric drill

Assemble instructions


Assembly steps


Step 1:

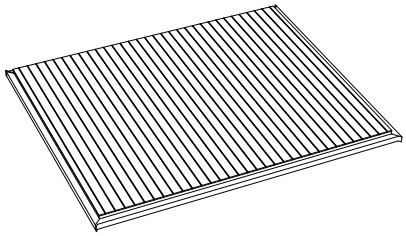

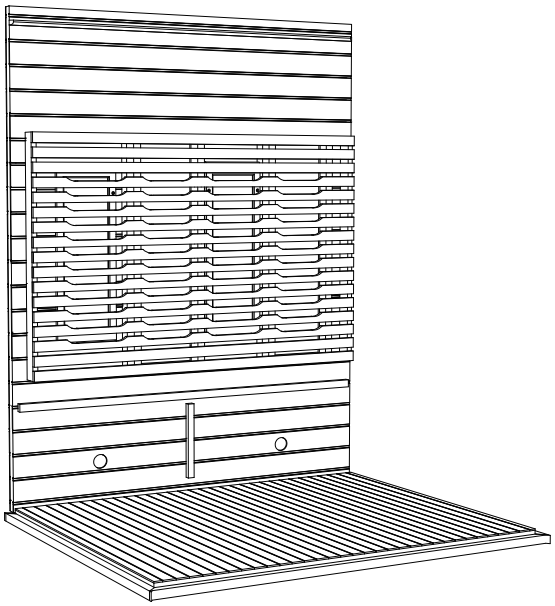

Step 2:

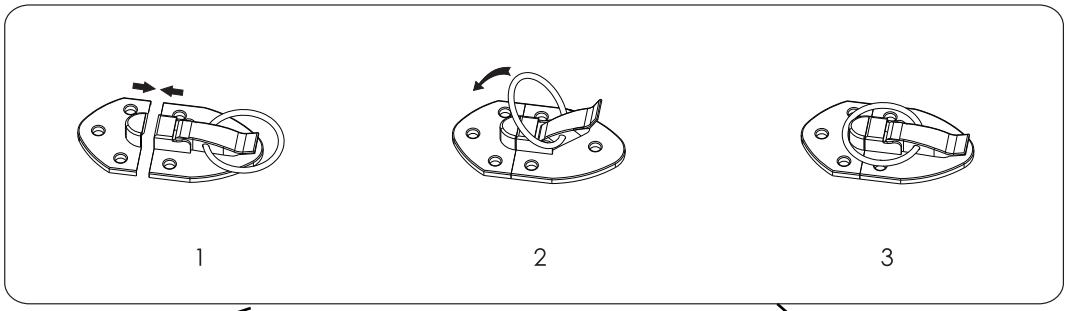


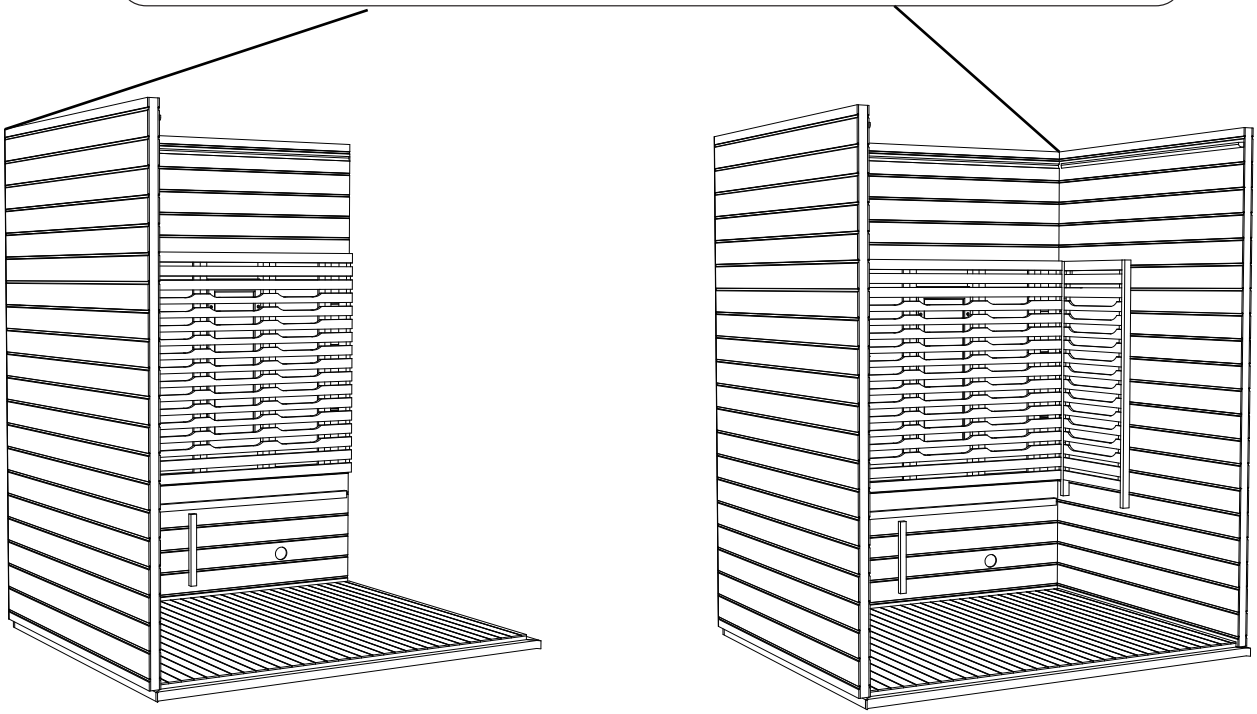


Assemble instructions

EN

Step 3:

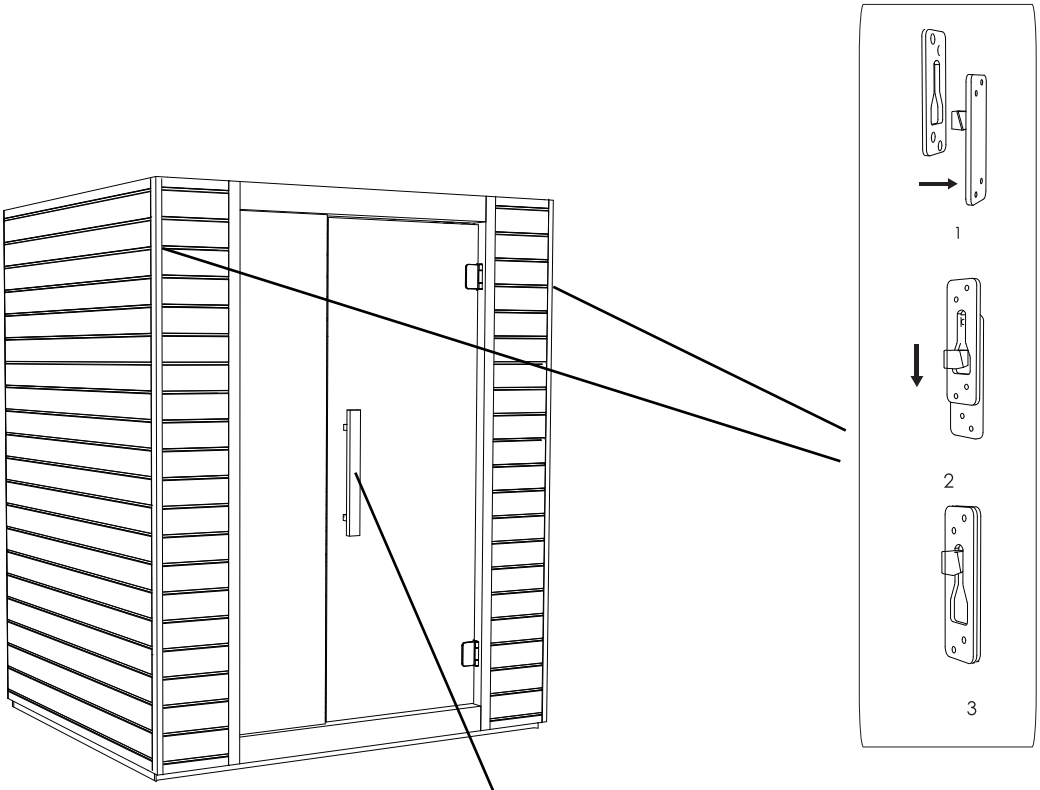


Step 4:

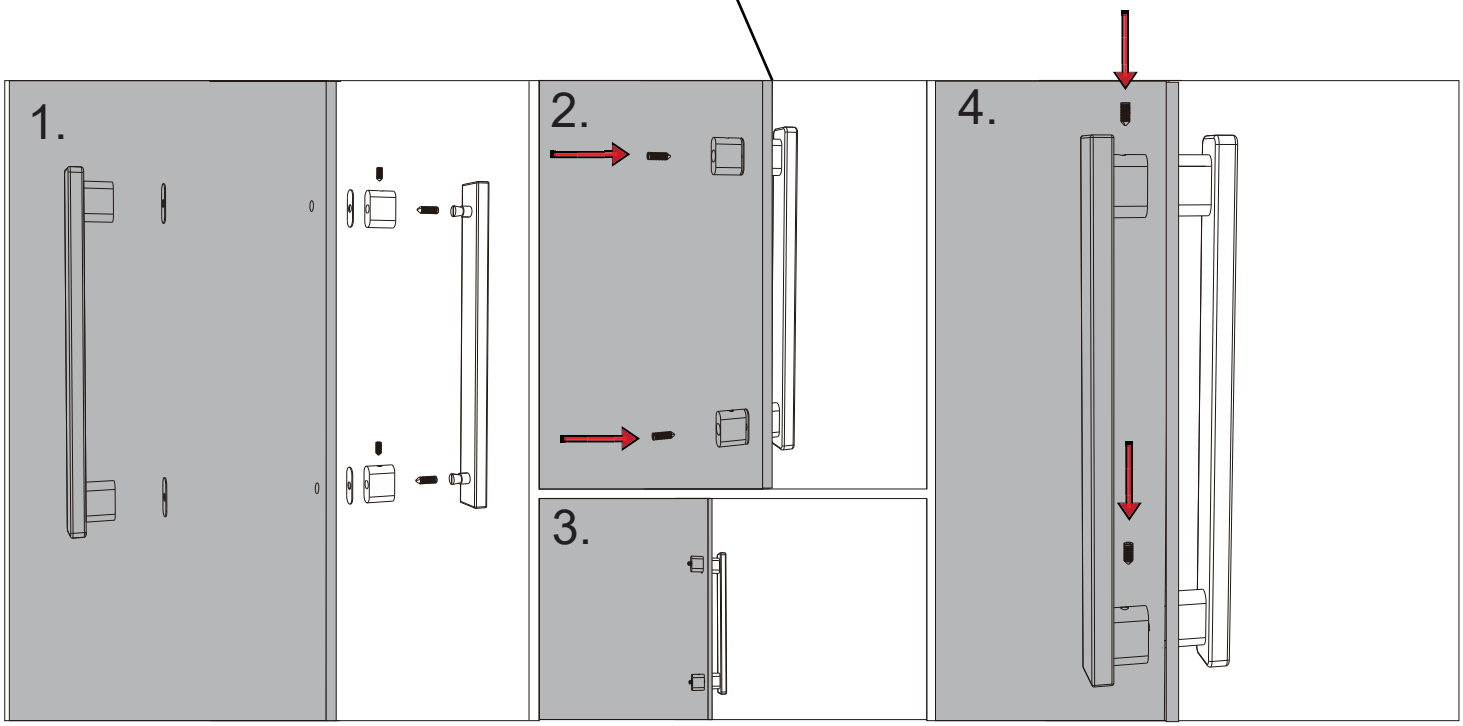


Assemble instructions


Step 5:

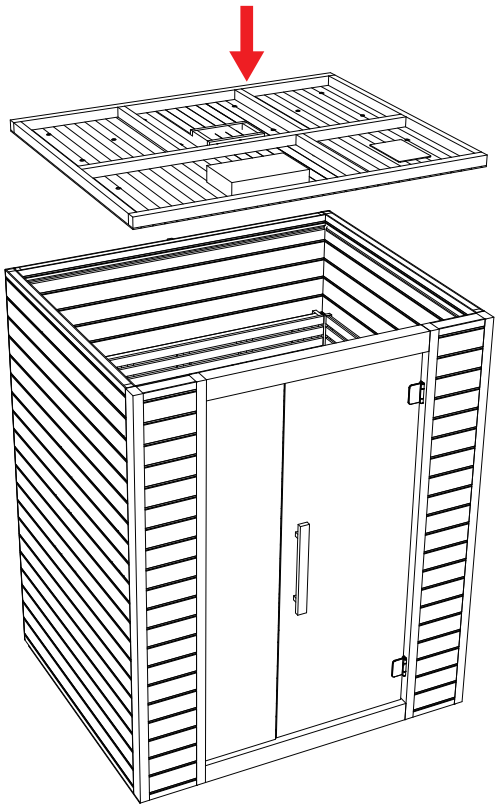


Note :
Connect all cables on the roof of the cabin.

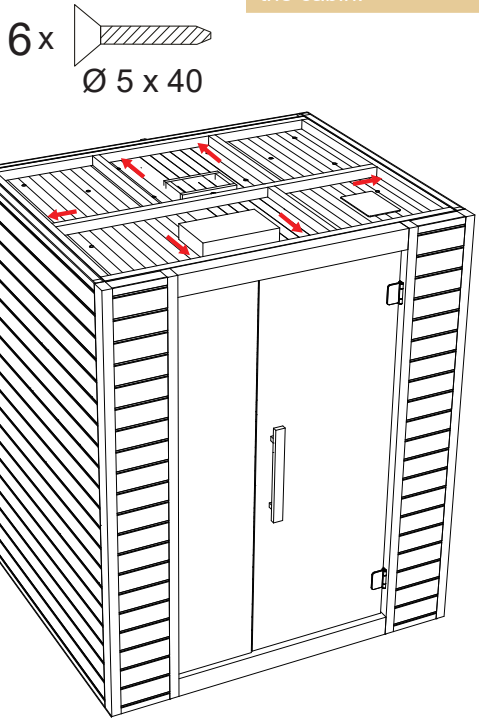


Step 6

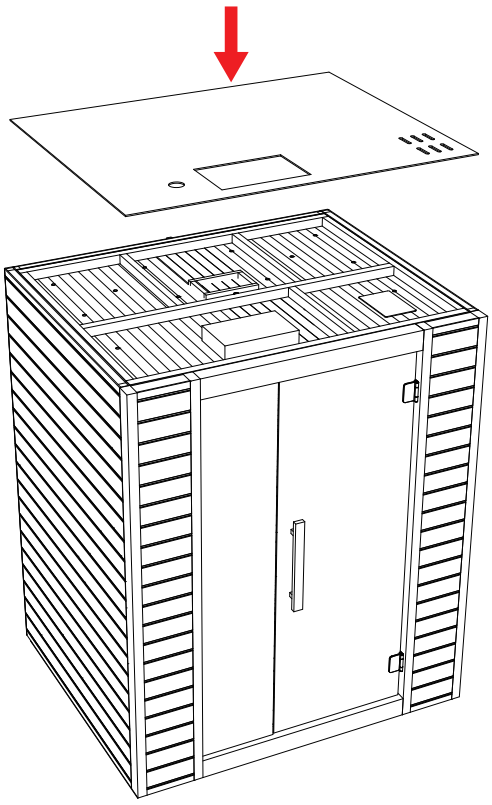


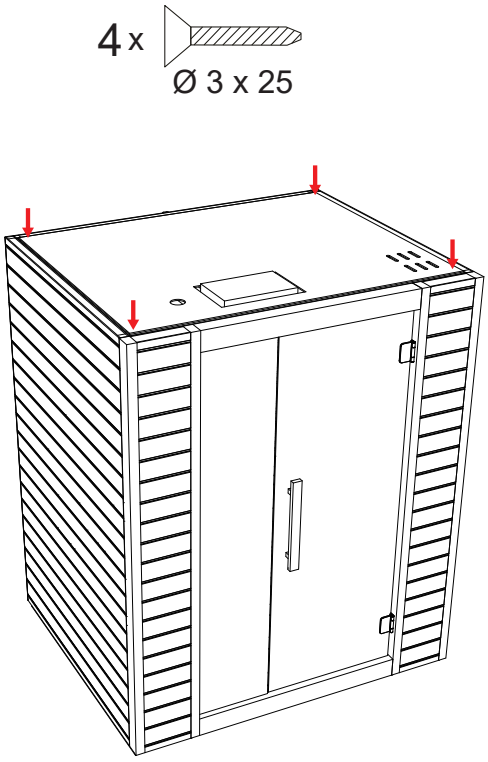

Assemble instructions

Step 7:

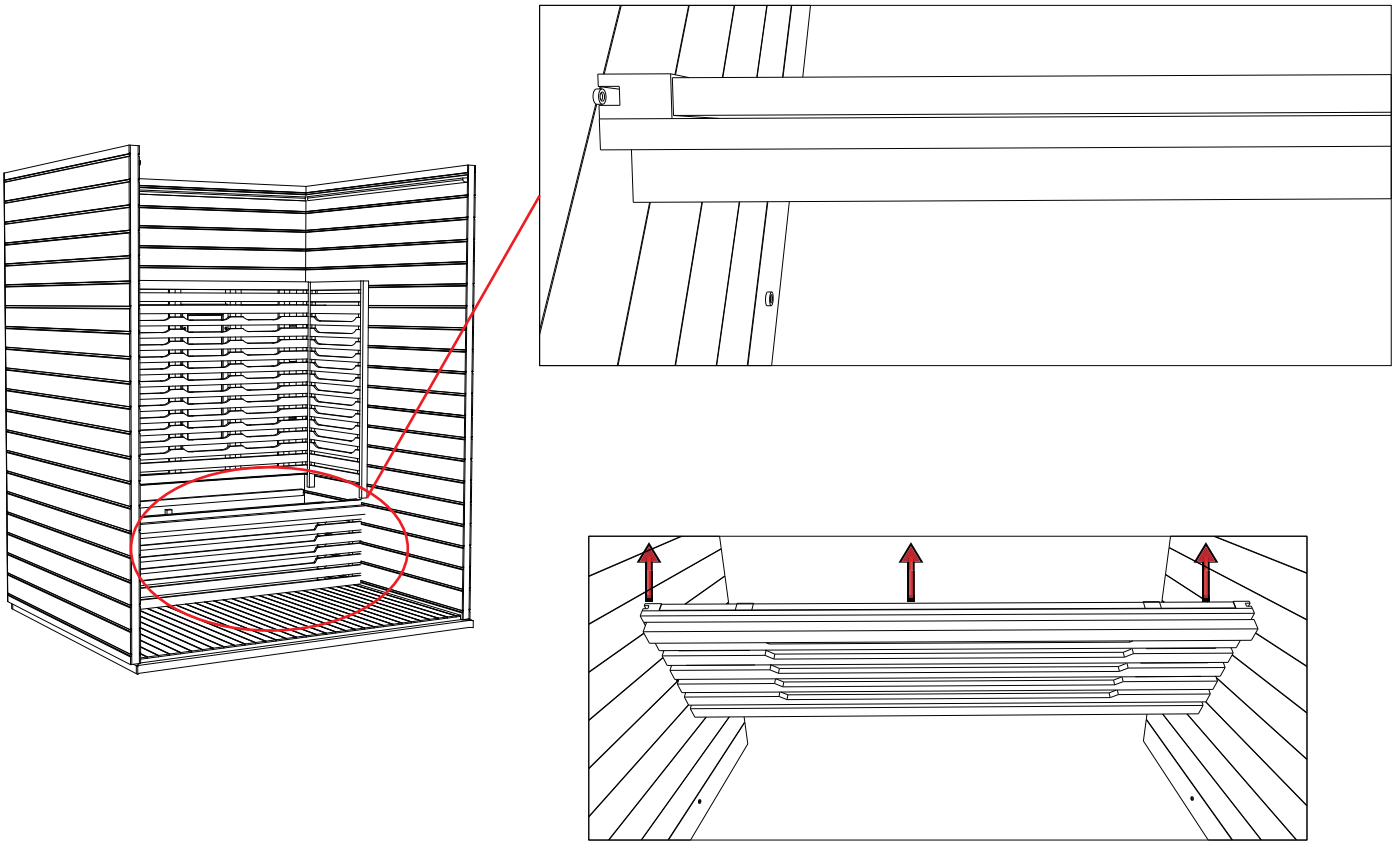


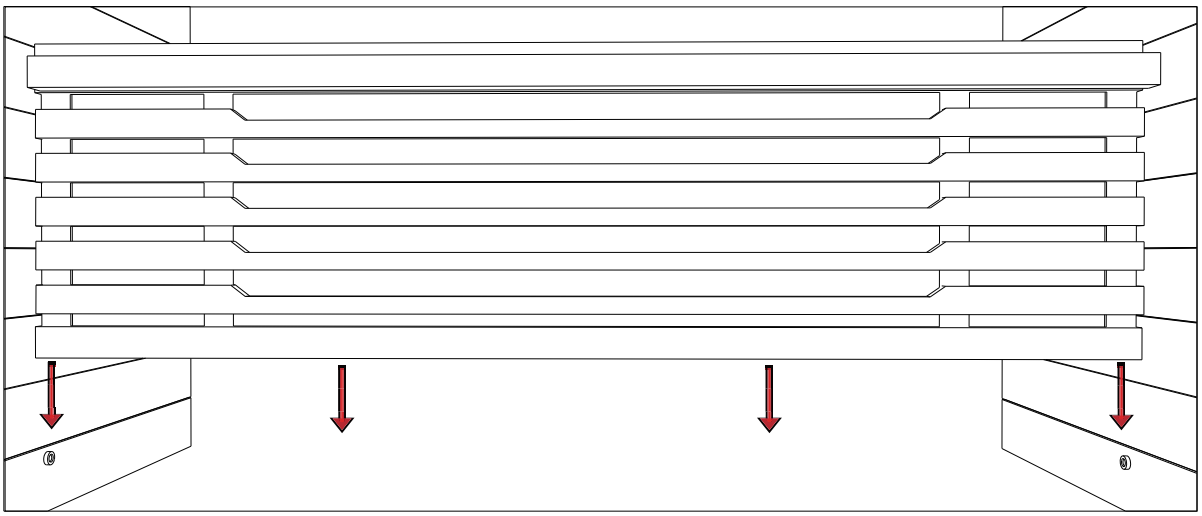

Assemble instructions


Step 8 :

EN

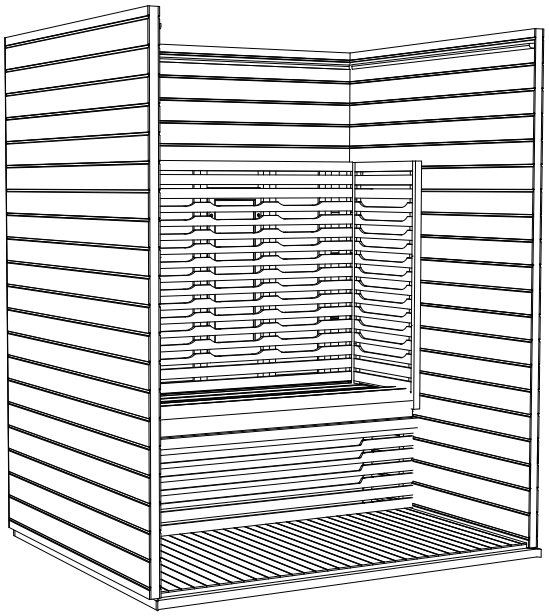




Note :
For stove installation, please refer to the stove manual.

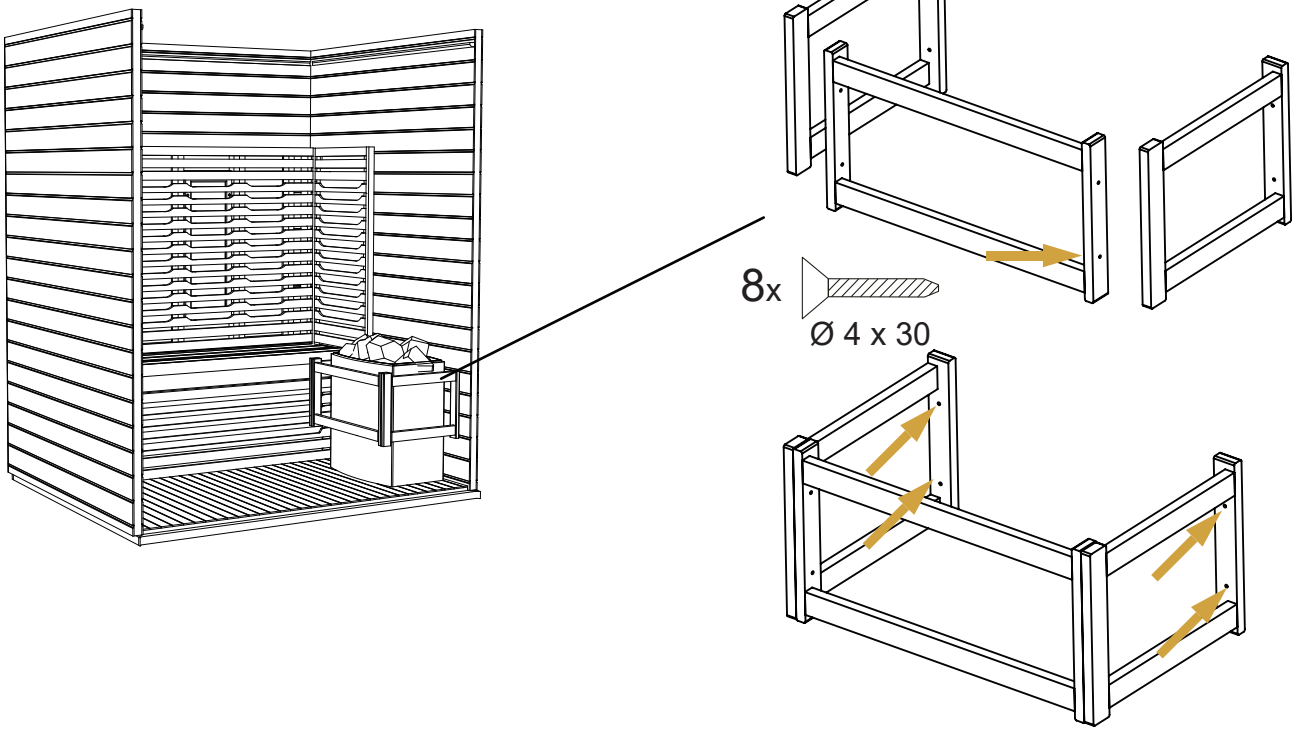

Using the sauna

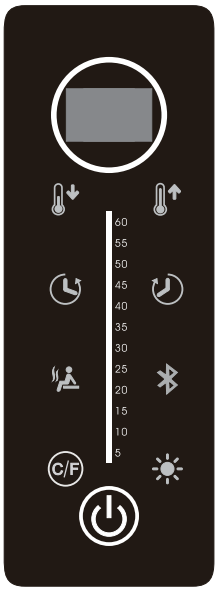

1. Switch on/power off

In energized state , the system is under standby , when first press power-button for 3 seconds, the system is switched on, when second press this button , the system and all loads will be turned off.if the button color shows green means on-state,and red color means closed

2. Light wave function

Under the power on state,press light wave button,start the light wave function ,green button means turn on,and red means turn off,the light wave temperature will memory last setting, time is 60 minuets

Light wave temperature setting:in light wave state,press temperature + - button to adjust the temperature,the adjustment range is 30-70 degree,every press could increase only 1 degree, if no operation exceed 8 seconds,the screen will returns to display the current actual temperature.

Press C/F button for 3 seconds to change the temperature display between ℃/℉.

Light wave time setting:in light wave state,press time + - button to adjust time,the adjustment range is 5-60 minutes,every press could increase only 1 minute. if no operation exceed 8 seconds,the screen will returns to display the current actual time.

3. Bluetooth audio function

Under the power on state,press Bluetooth button,start the Bluetooth audio function,green button means turn on,and red means turn off, turn on the Bluetooth function of your mobile device ,search and pairing it,then listen to the music.

4. Light control system

Press light button to turn on the color light(the light color memory last setting),green button means turn on,and red means turn off,under the light on conditions,long press this button 5 seconds could change the light color,every press could change only one color,cyclic Conversion and memory(L1 =white color,L2=red+blue color,L3=blue color,L4=blue+green color,L5=green color,L6=green+red color,L7=red color,L8=every color mutation,L9=every color Gradual)

if no operation exceed 8 seconds,the system exit light control mode.

Fault detection and protection

1. High temperature protection

If the detection temperature of sensor has exceed 80 degree,the two digital tubes display”H-H”at the same time,the alarm flashed and all function stopped,even if the temperature drops to 75 degree,all function can not be restore anymore,it must be powered off first then powered on again.


2. Sensor fault detection

open circuit:Two digital tubes display” E0 “and flash,buzzer alarmed,all function can not be open anymore, fault eliminated then can be used normally

Short circuit:Two digital tubes display” E1 “and flash,buzzer alarmed,all function can not be open anymore,fault eliminated then can be used normally

Using the sauna

EN

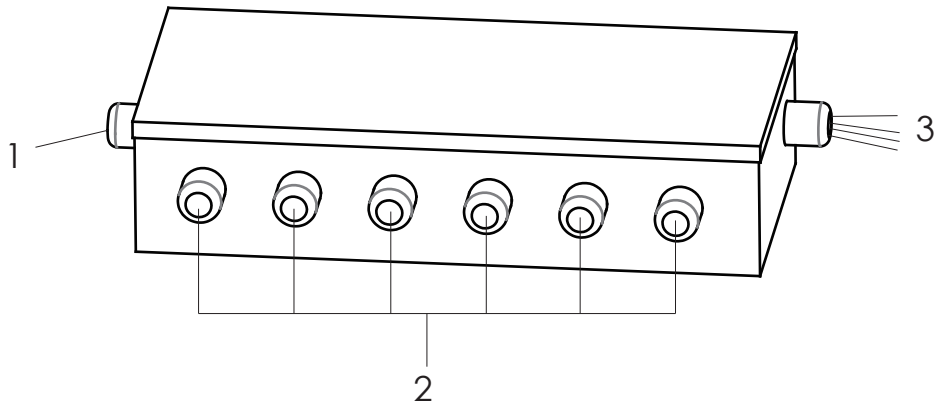

This control box is the control center of sauna room,it is installed on the top board,input/output connections as below.

1 Main power of sauna room.

2 Heaters power output cable

3 Control panel connecting
Color lamp power output cable(optional)
Temperature sensor connection port
12V output
Speaker

Maintenance & servicing

Maintenance

IMPORTANT :
Disconnect the cabin's power supply cable before undertaking any work.

Problems identified	Possible reasons	Solutions
No indicator light displayed on the control panel.	Power supply cable disconnected.	Check power supply cable connection.
	The general power supply is cut.	Check that the switchboard and wall plug are working.
	Fault in power supply unit.	Contact your dealer.
One or more infrared panels do not heat up.	The infrared panel's cable is disconnected.	Check cable connections.
	One of the infrared panels is defective.	Replace the infrared panel with an original component supplied by the manufacturer.
Sauna gives off a smell.	Temperature of the panels or their cables is too high.	Switch off power supply and contact your dealer.
A speaker is not working.	Speaker cable disconnected.	Reconnect the cable.
	Speaker defective.	Contact your dealer.
Screen shows a wrong temperature.	Temperature sensor is incorrectly connected or defective.	Reconnect the cable or replace the sensor.

Servicing

1. Disconnect your sauna.
2. Use a vacuum cleaner to remove dust from crevices in the woodwork.
3. Clean the cabin with a damp cotton cloth and use a small amount of soap if necessary. Rinse with a damp cloth.
4. Clean the glass with a window / glass cleaner and a soft colth.
5. Please check and fasten the screws of the bench once every three months to prevent the play or fall of the seat.

IMPORTANT :
Do not use benzene, alcohol, chemical agents or strong detergents on the sauna since chemical products can damage the wood. Do not spray water on your sauna.

Warranty

EN

All the components of Holl's saunas are guaranteed for 2 years.
The warranty comes into force on the date of dispatch (corresponding to the date the invoice is issued).

The warranty does not apply in the following cases:

- Malfunction or damage arising from installation, usage or repair that are not in compliance with the safety instructions.
- Malfunction or damage arising from conditions that are unsuitable for the equipment's originally intended purpose.
- Damage arising from negligence, accident or force majeure (thunderstorm or bad weather).
- Malfunction or damage arising from the use of non-authorised accessories.
- In the event of deterioration involving pests (rats, termites, etc.) after the installation of the sauna.

The warranty does not cover the costs linked to returning the cabin or part of its components to our workshops of.
Under the warranty, in the event of a breakdown, the items deemed defective by our technicians will be exchanged.
Information and explanations required for their installation will be provided by one of our technicians.
Costs linked to the use of subcontract labour provided by a third party cannot be covered by Holl's.

IMPORTANT

Do not return the product to the store

Contact your local after sales service on
www.holls.fr